



Instructions for use



Marky



On absorbent surfaces

Marky can be used directly on cardboard, paper and other absorbent surfaces.






Marky



On non-absorbent surfaces

For labelling all non-absorbent surfaces, the Marky set comes with 2 different-sized, specially dishwasher-safe labels.

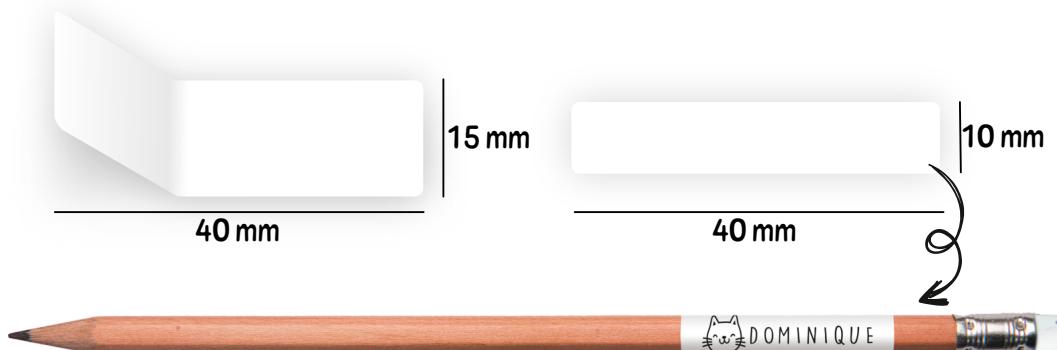


For larger items such as lunch boxes and drinking bottles, please use the larger labels with space for 2 lines. Smaller items such as pens and scissors, etc. can be marked with the enclosed small label with space for 1 line of text. For the small labels we recommend to use the middle lines of the ribbed text plate.

To have a neatly stamped label, place the stamp exactly on the perforated lines on the label sheet, which serve as a positioning guide. Then stamp and ready!



Marky

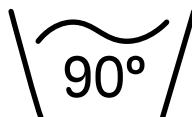


On textiles

Your Marky is provided with a special ink that can be stamped directly onto light-coloured textiles. For dark fabrics, use the enclosed textile tape, which you stamp first, then cut off and iron in. The Marky ink can withstand washings between 30°C and 90°C without any problems.



Marky

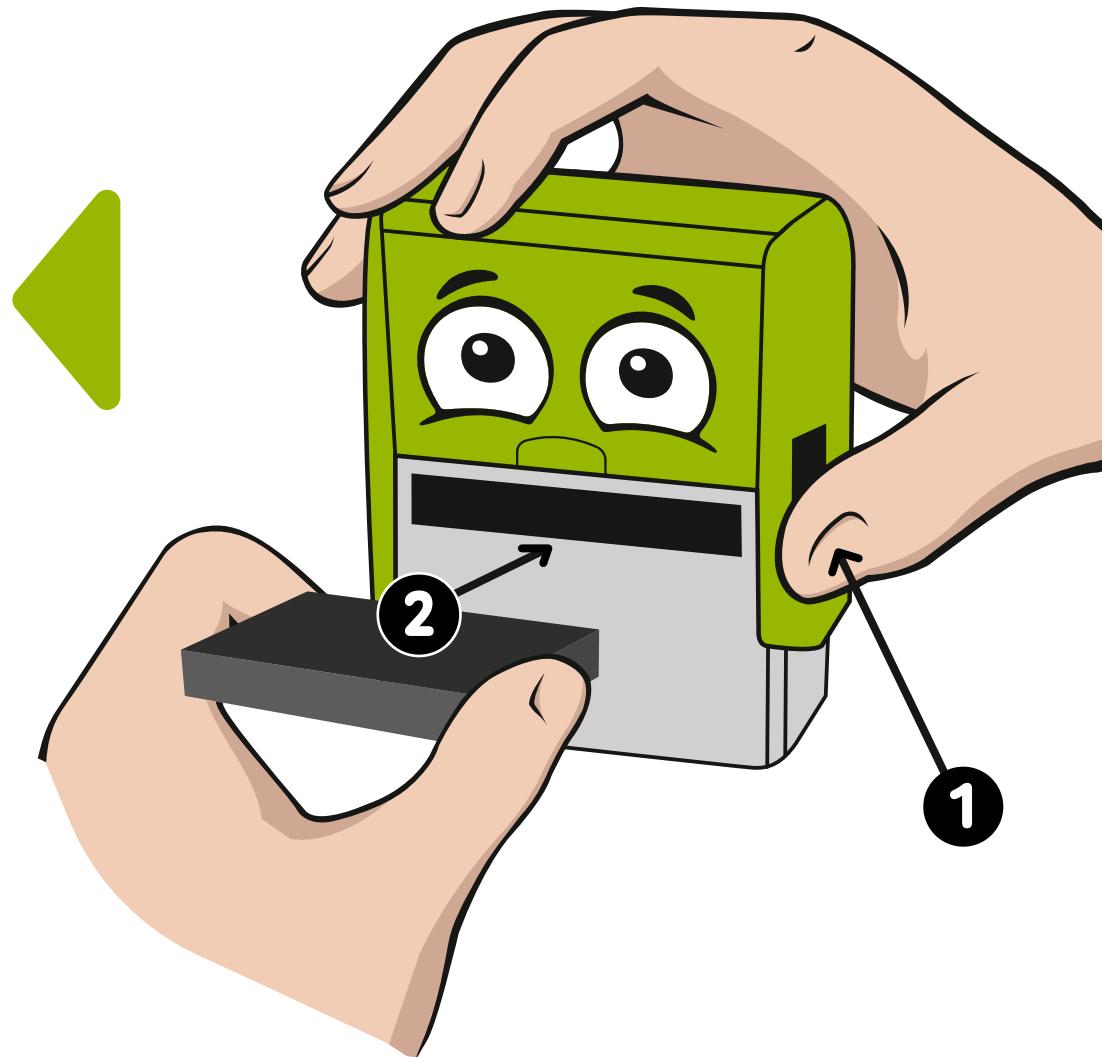

Pad changing, it's easy

- 1 Press Marky slightly downwards and lock it on both sides
- 2 Push the empty ink pad through and remove it. Insert the new pad with the inked side facing down... Unlock the stamp. Ready.